

TV Lift Cabinet

Installing the Smart Lift in Your Furniture

MISSING PARTS or HAVE QUESTIONS?

CALL 561-417-0999

Our customer service will address any missing parts, damage, or questions, so you won't need to return your TV lift.



WARNING

This product contains small items that could be choking hazard if swallowed. Keep these items away from young children!




WARNING

Do not use this product for any purpose not explicitly specified by TVLiftCabinet. Improper assembly may cause property damage or personal injury. If you do not understand these directions, or have doubts about the safety of the assembly, contact Customer Service or call a qualified contractor. TVLiftCabinet is not responsible for damage or injury caused by incorrect assembly or use.

www.TVLiftCabinet.com

Customer Service: 561-417-0999


1:Tools and Parts Required for Installation

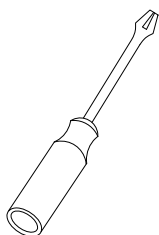

Philips Screw Driver
(Not Included)




1 x Radio frequency
remote control

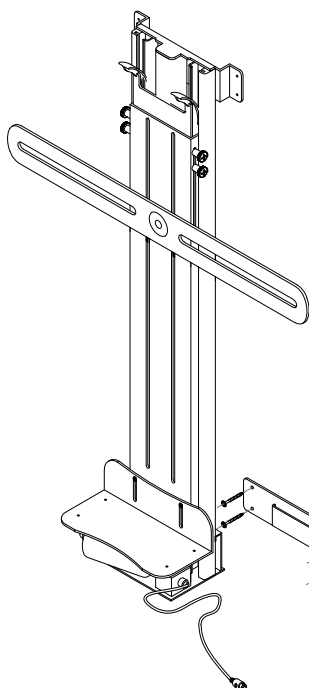


Lifting Column

 Lower Mounting
Bracket

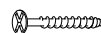



12 x Wood Screws
(For Mounting the lift and Control Box)

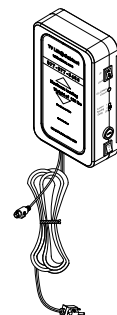



Manual Control Box

2:Installation Instructions


- 1) Check to make sure the interior height for your cabinet is $\frac{1}{8}$ " taller than the lift. Mount the lift column $\frac{1}{8}$ " below the lid.

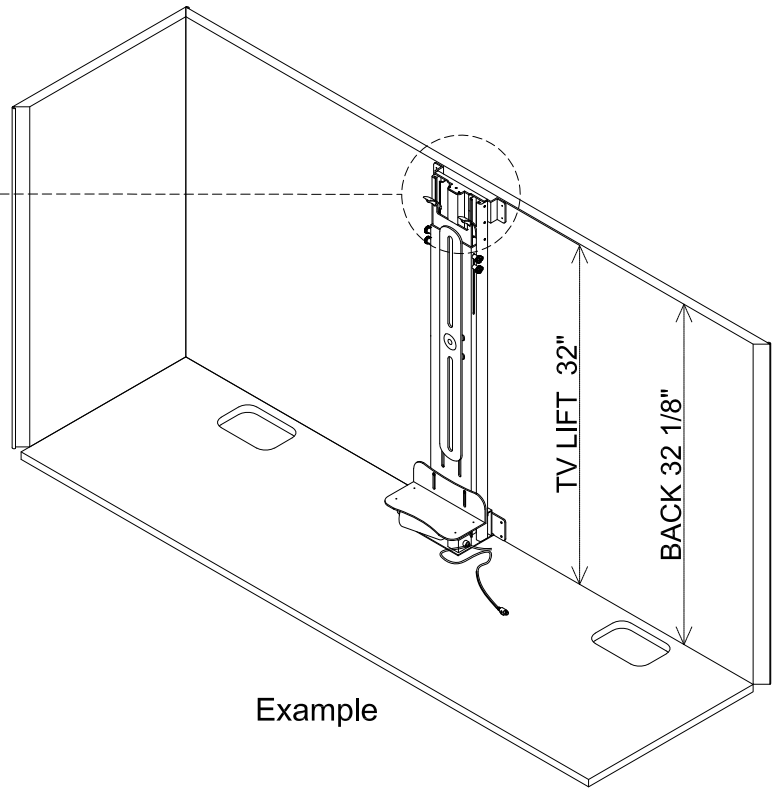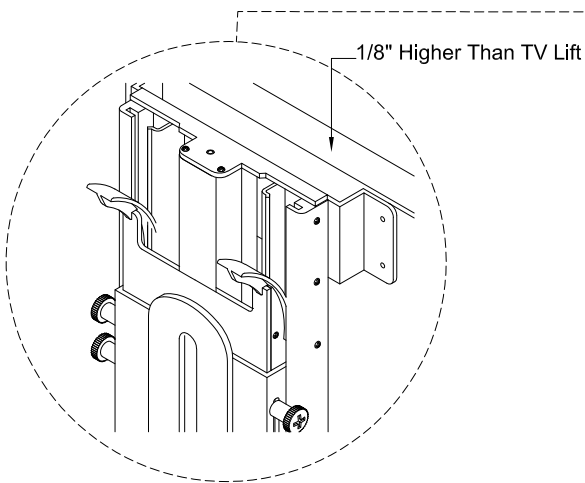


- 2) Install the lower lift mounting bracket using 4 of the 12 wood screws supplied.

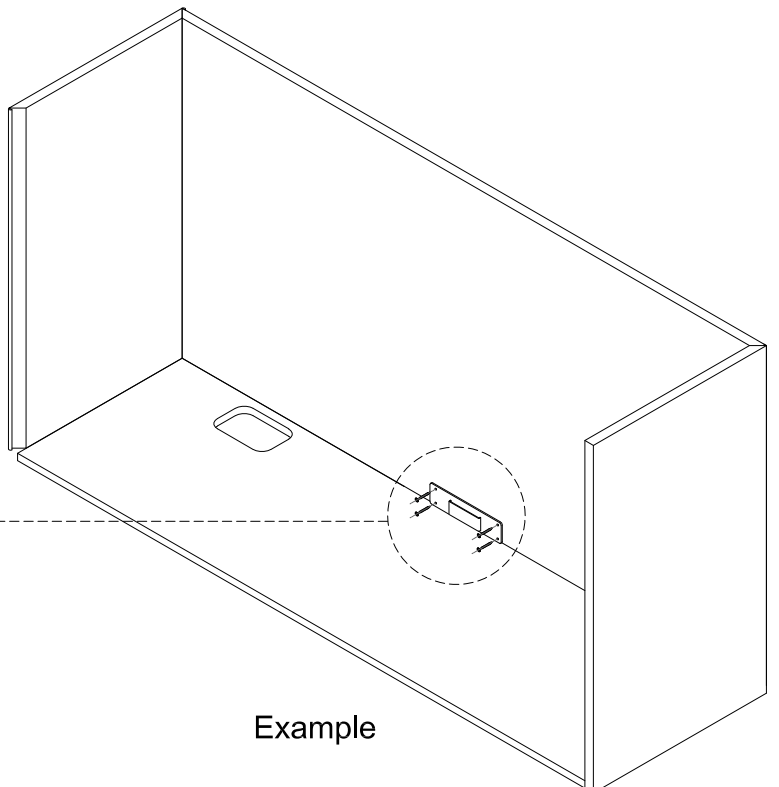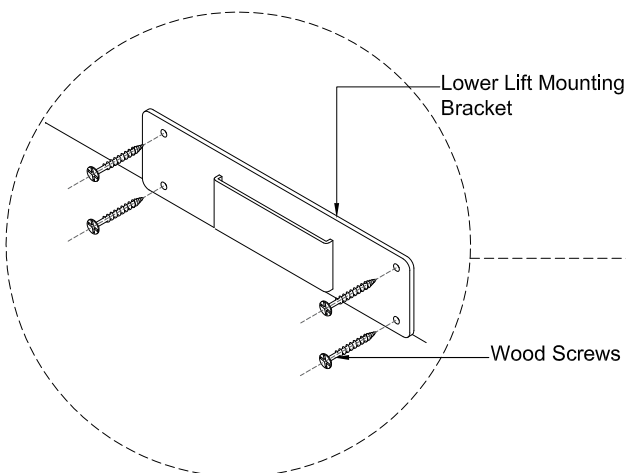


- 3) Slide the lift down over the lower lift mounting bracket and click it into place.

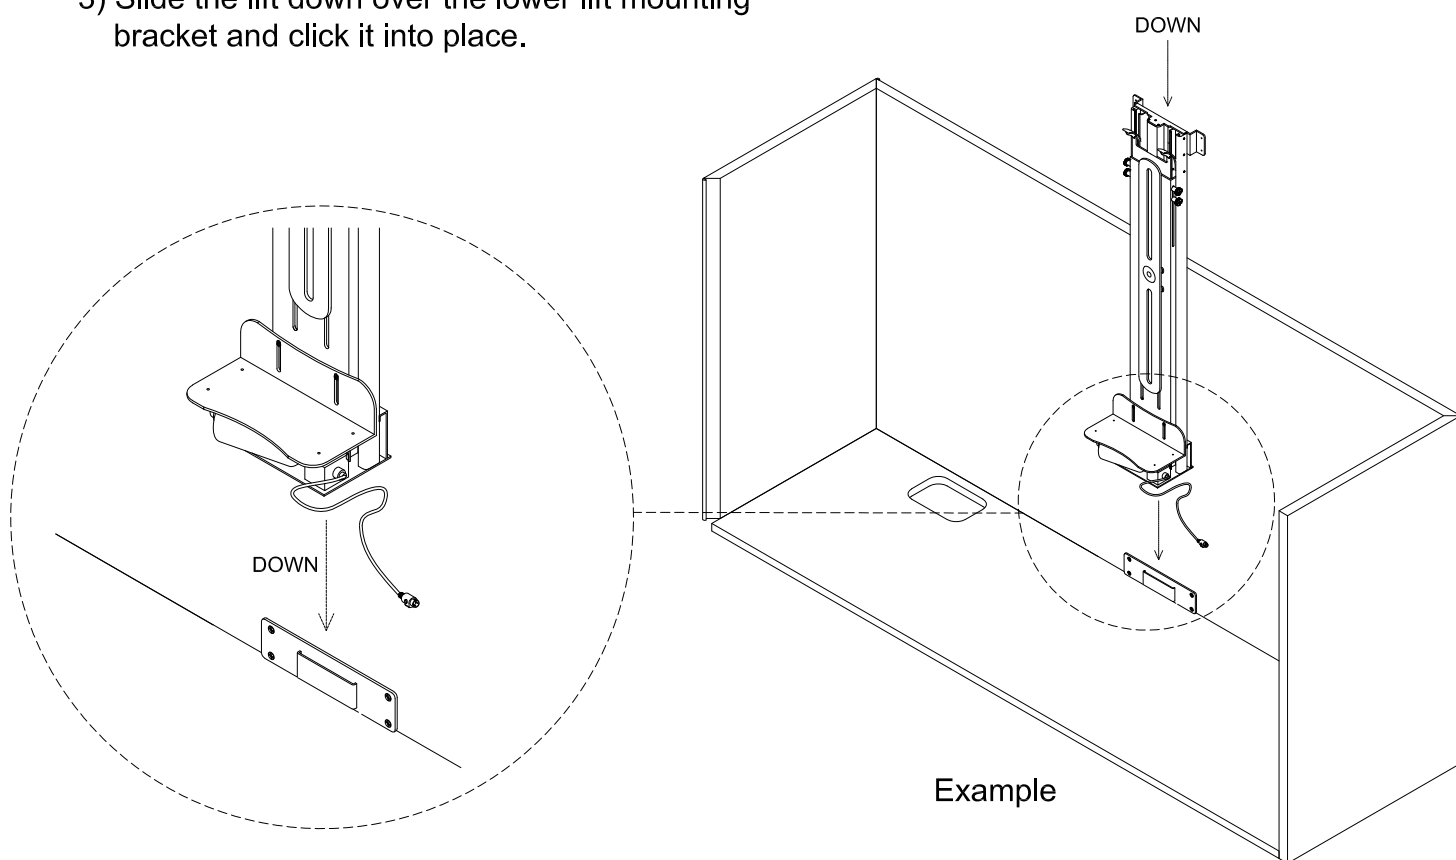


- 4) Push the TV lift column against the back wall of your cabinet and make sure it is 100% straight. Once the lift is straight, use 4 of the 12 screws supplied to fasten it in place.

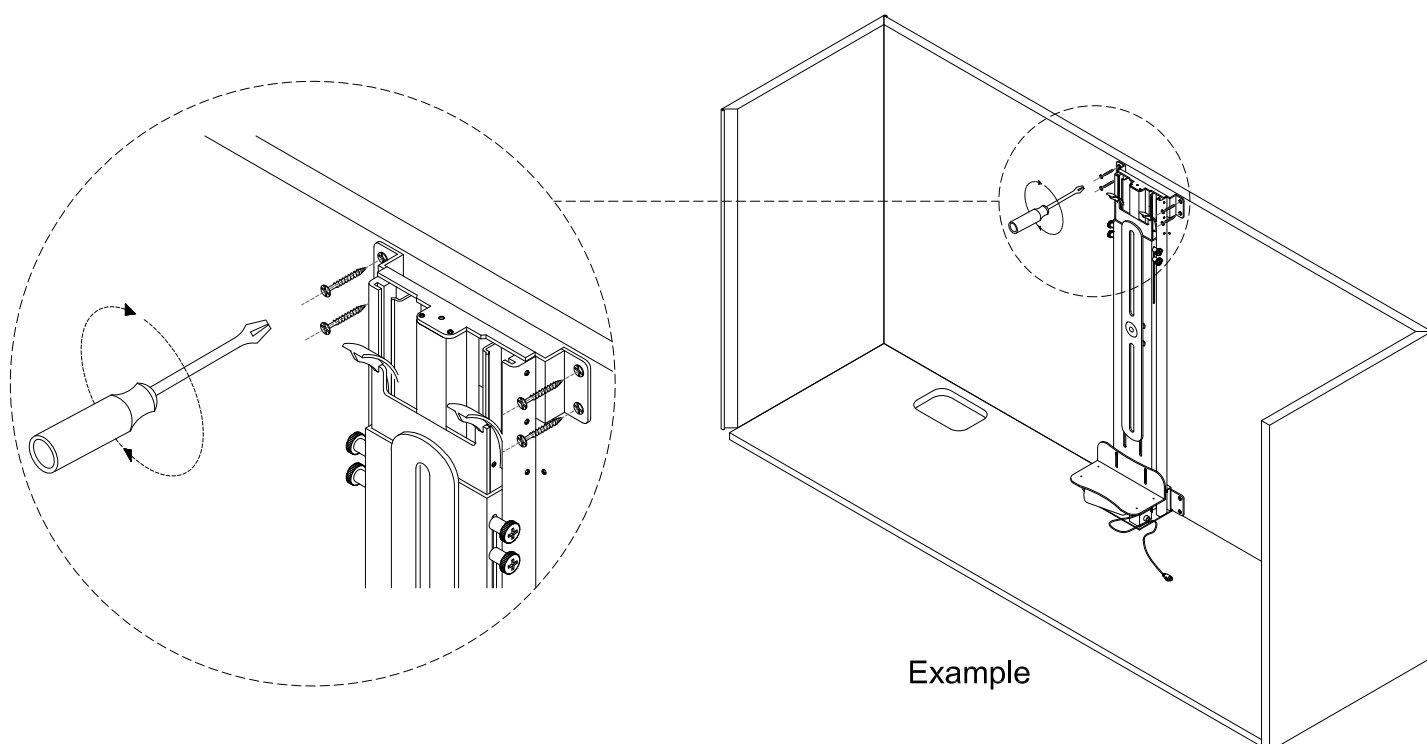


- 5) Using 4 of the 12 supplied wood screws, mount the manual control box in the upper right hand corner of the cabinets back panel.

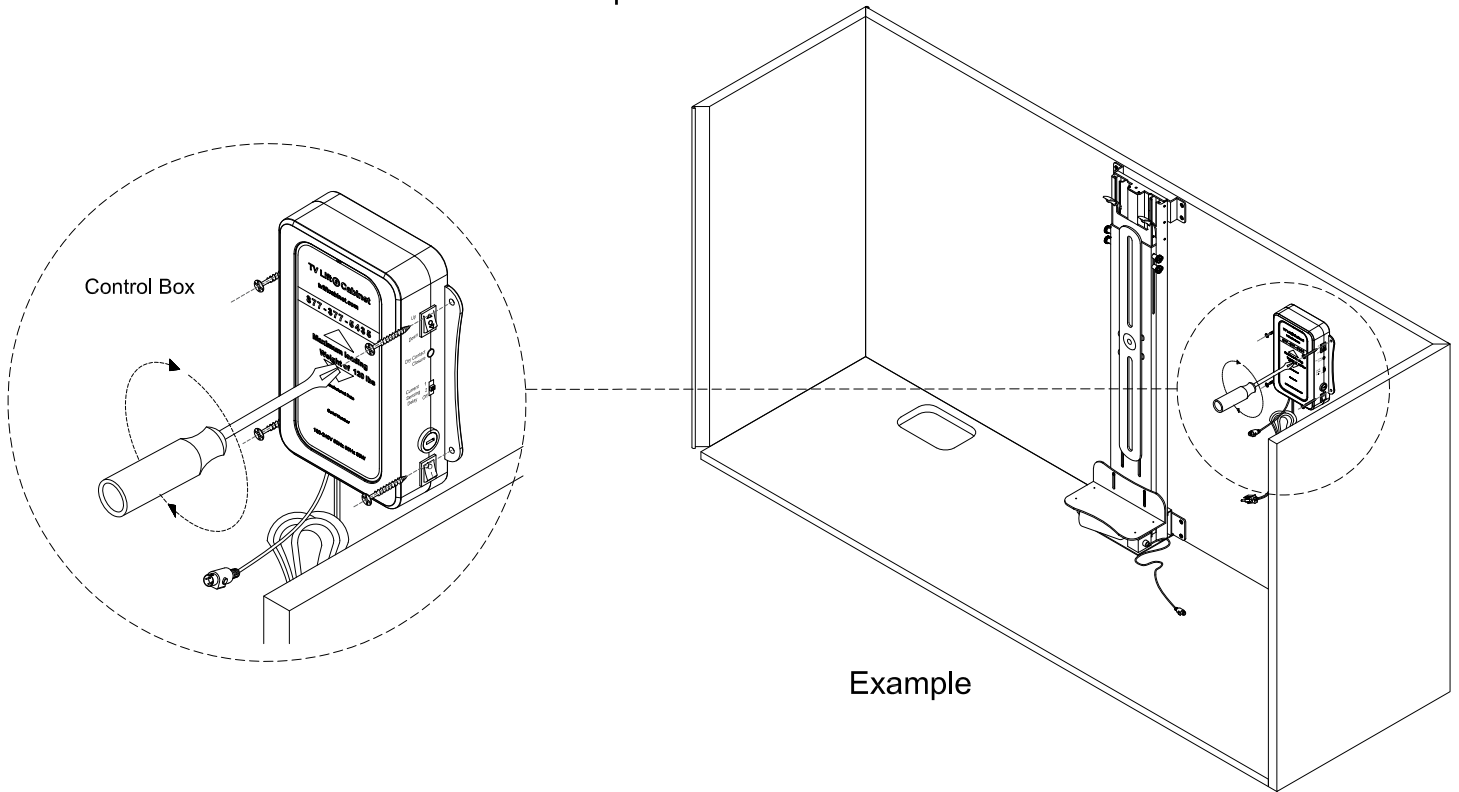


- 6) Connect the lift to the control box by inserting cord into socket. Flip the cable lock into place so the wires do not detach.

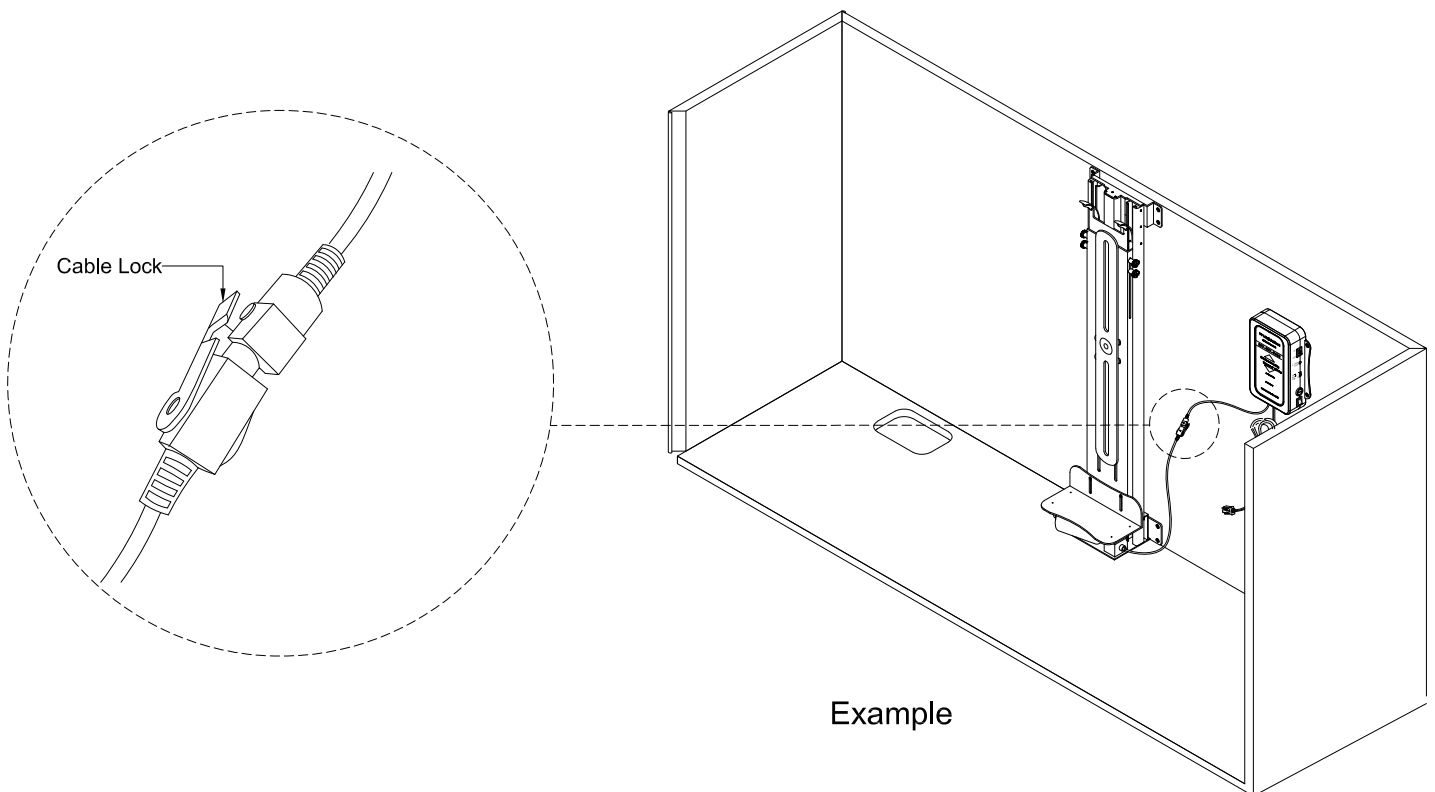

7) Plug the lift into the wall and turn the power switch ON. Raise the lift by pressing the UP button on the remote and releasing the button (do not press and hold the remote buttons or the remote will lock.)

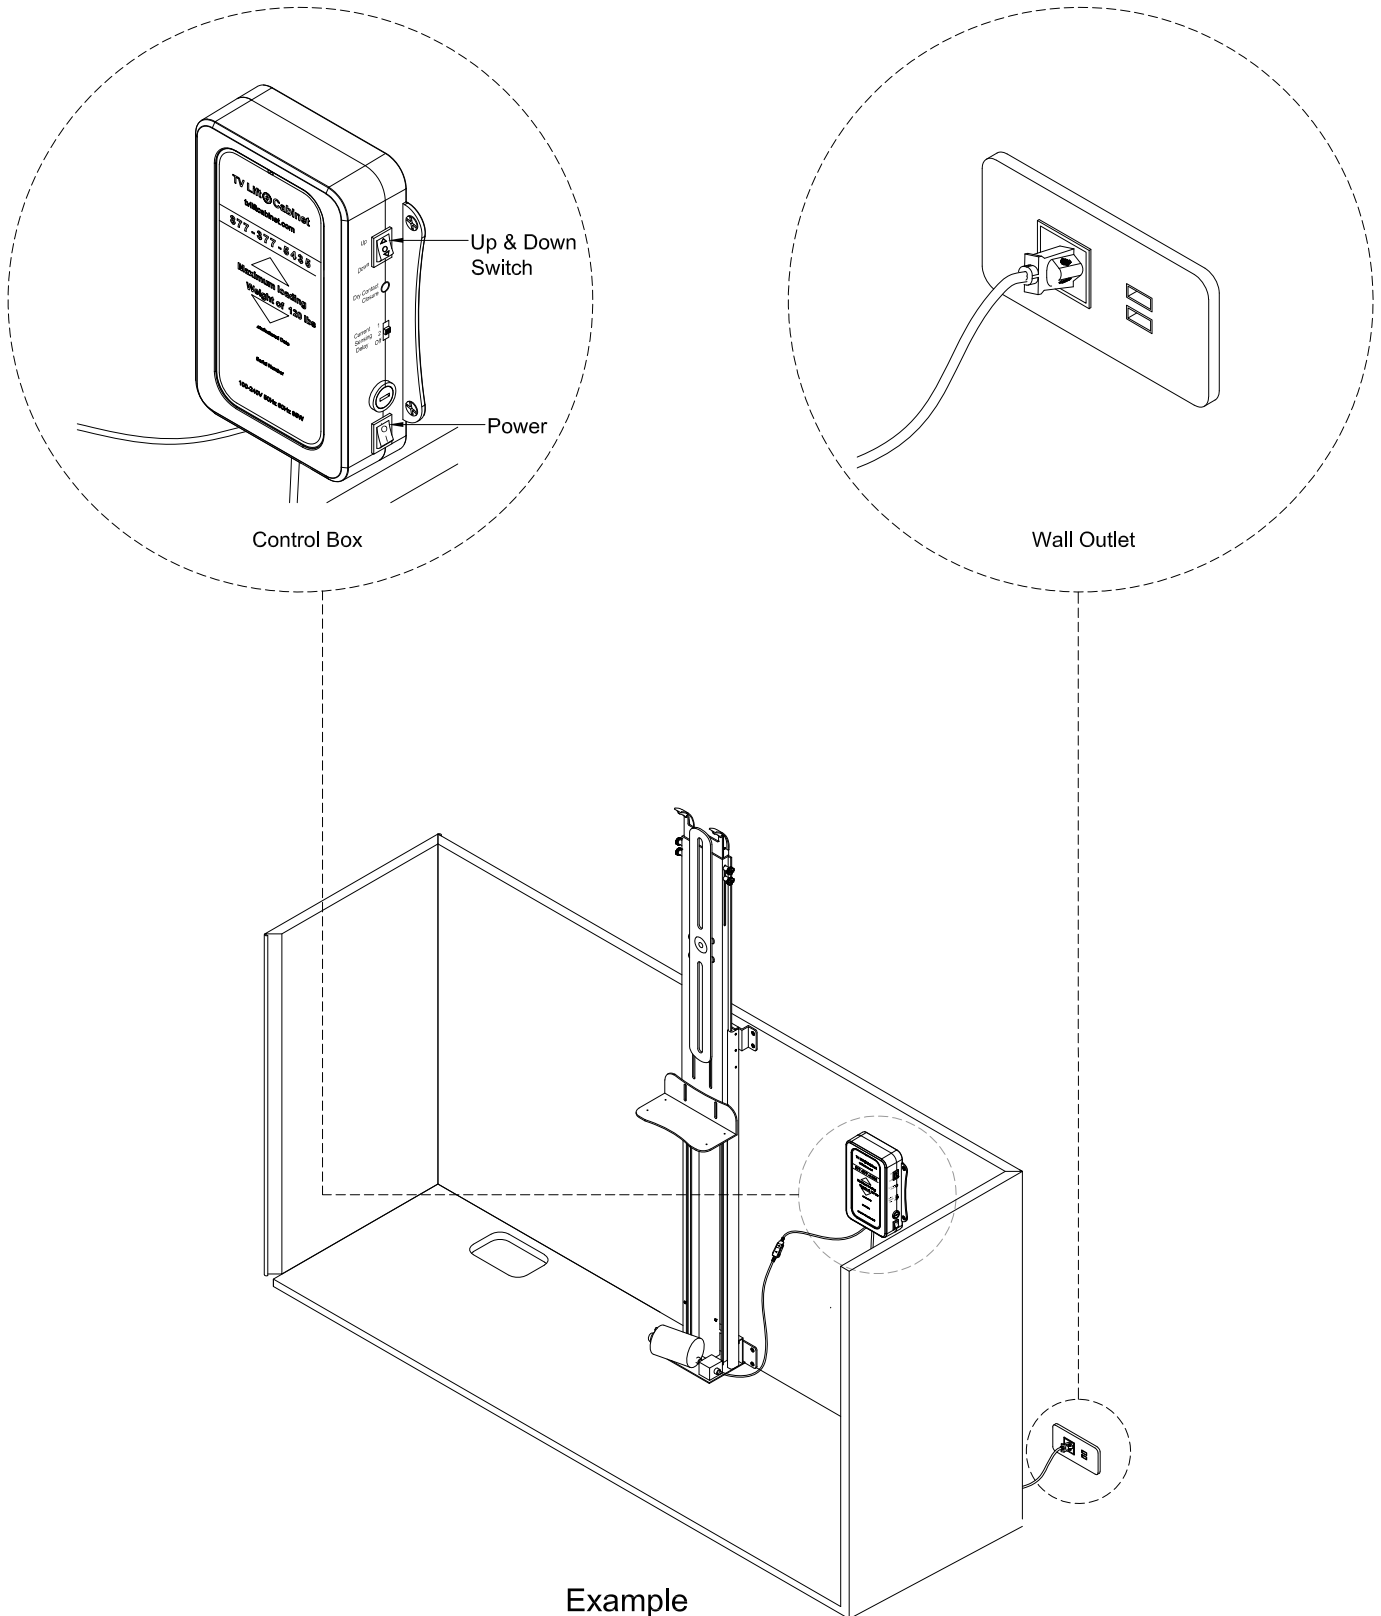

8) Rotate the TV bracket into the horizontal position.




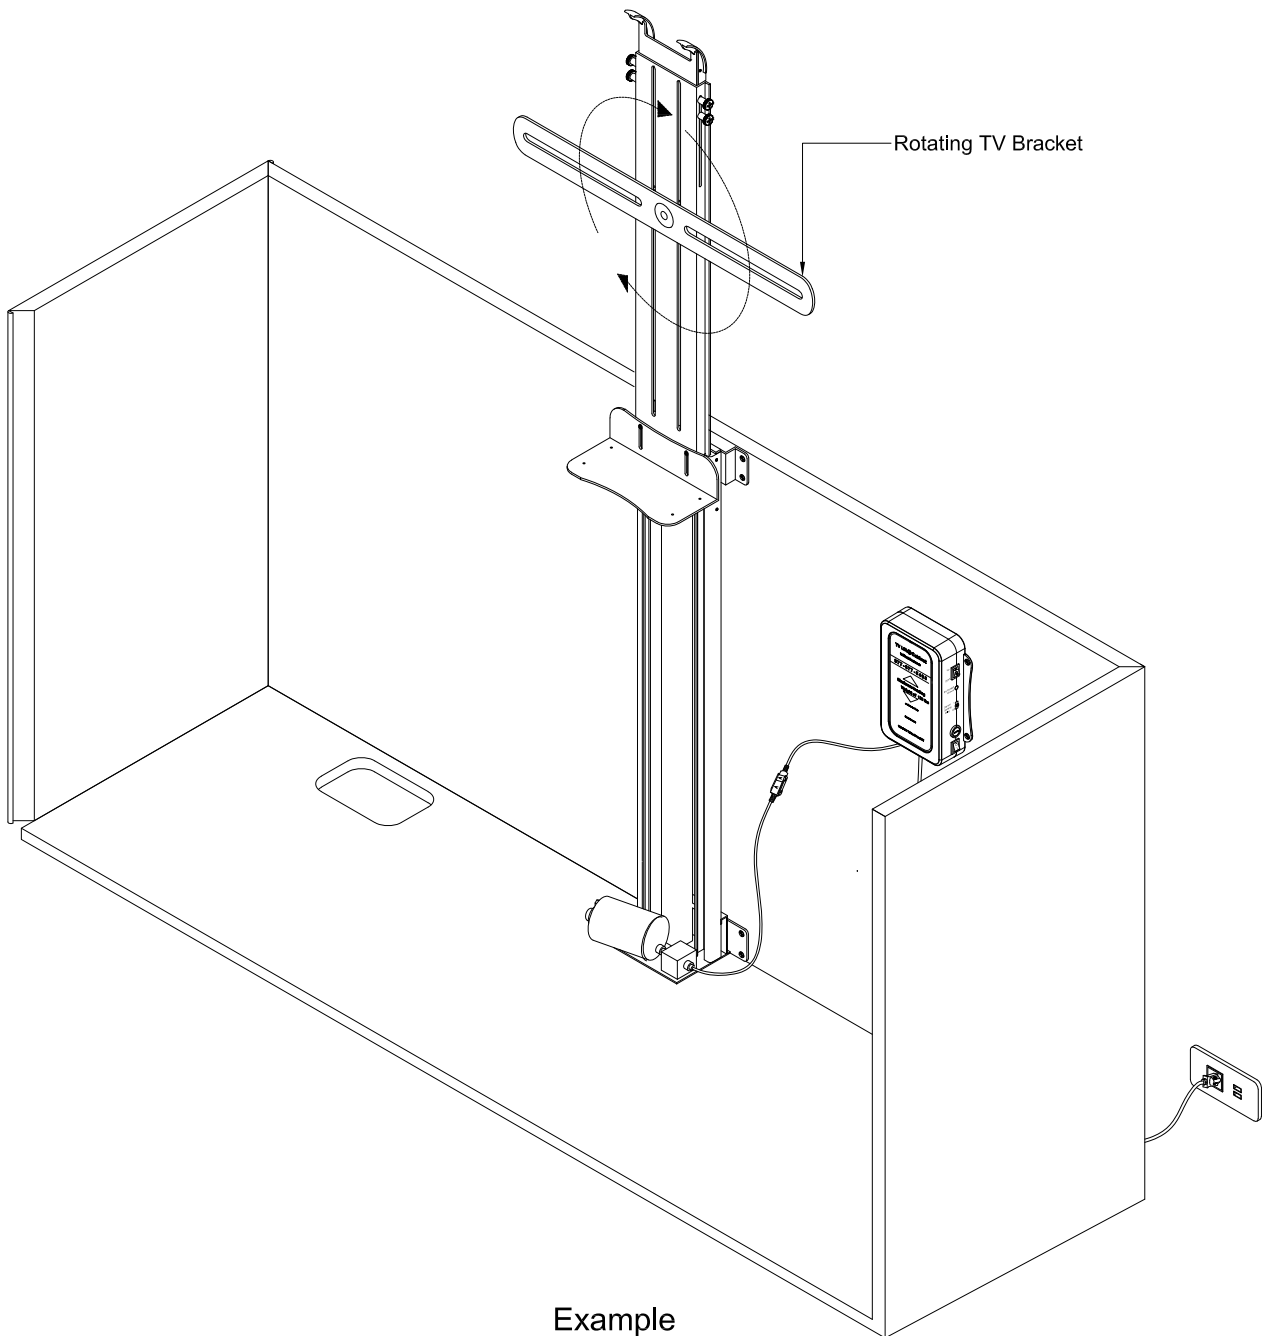


Installing the Optional Fixed Lid Bracket



WARNING

You must design out all pinch points when installing this machine. Keep hands clear during operation. We recommended not fastening your top board to the machine. We recommend Velcro for safety allowing the lid to break away.

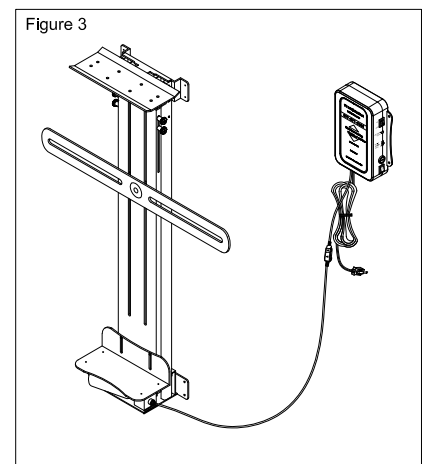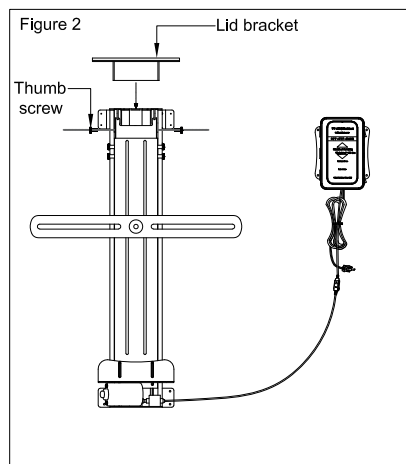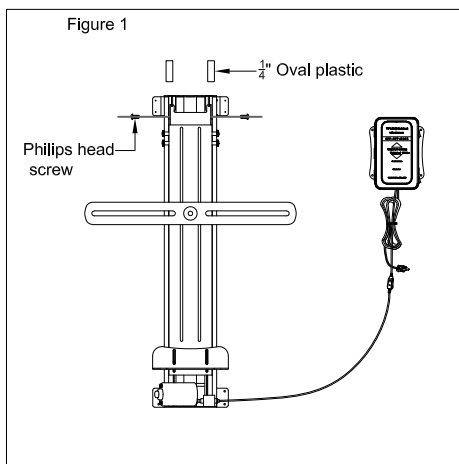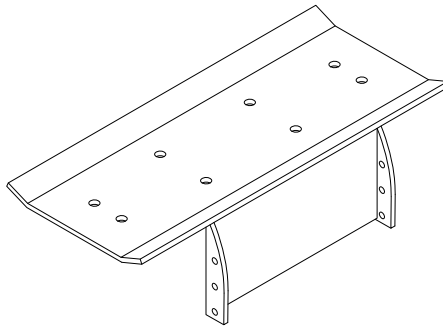


1. Loosen the four Philips head screws (Fig. 1) and remove both $\frac{1}{4}$ oval plastic pieces.
2. Insert the fixed lid bracket and fasten using the four supplied thumb bolts.
3. The completed unit should look like (Fig.3)

Resynchronize your Remote Control If It Is Not Communicating

If the manual up / down switches are operating your lift but the remote control is not, your remote has likely lost its connection to the lift. This can be corrected by syncing your remote with the lift as follow:

1. Drive the lift into down position.
2. Turn the lift off.
3. Leave the lift off for 60-90 seconds minimum.
4. After 60-90 seconds has expired, press and hold the up button on the remote control. The light on the remote should stay on.
5. While keeping the remote UP button depressed, QUICKLY turn the lift back on.
6. After 2-5 seconds, the lift should begin running up.
7. Release the up button as soon as the lift begins to move.
8. The remote is now synchronized.

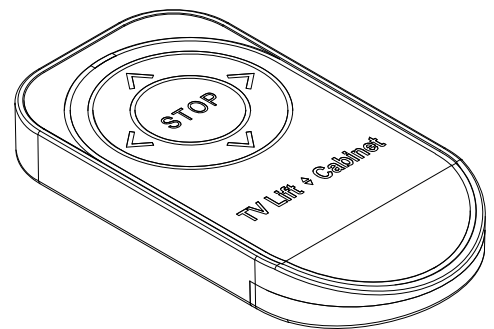

www.TVLiftcabenit.com
Factory Direct TV Cabinets -Since 1970
Customer Service:561-417-0999